



hsg labs® | 4P

First of all, we thank you for purchasing this HSG Labs | 4P. Please carefully read this Quick Start Guide before operating the device and keep it for future reference. This user guide will help you to use it properly, safely, and take full advantage of its features.

Full Manual, Support and Service contact:




support@hsg-labs.com

Product illustration and features:



Camera lens

 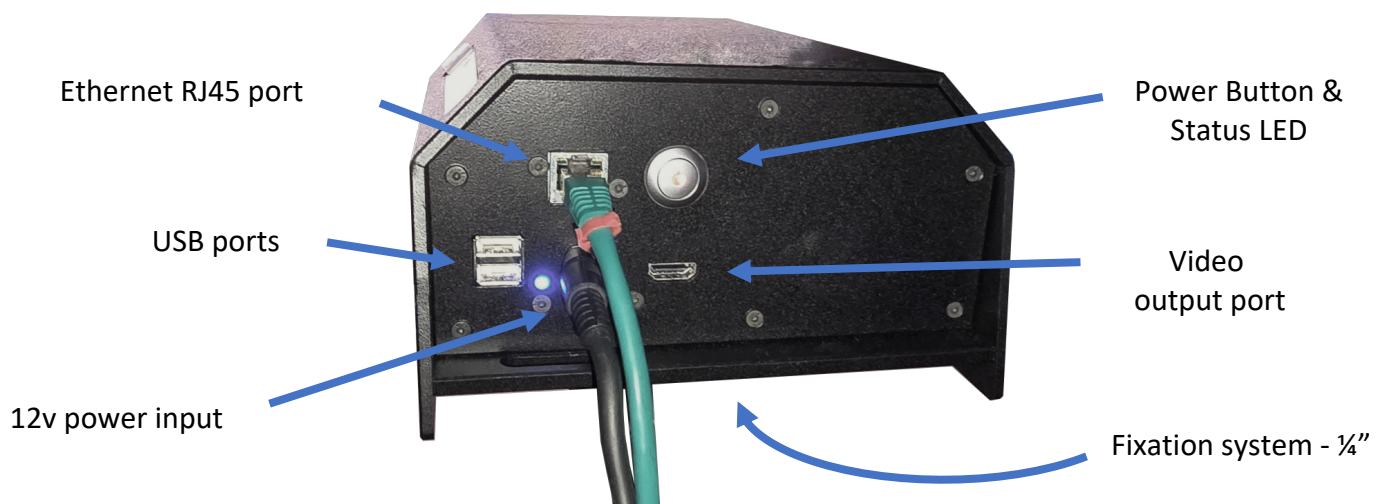


Manufacturer: HSG Labs | 151 voie H Impasse des Bruyères | 06370 Mouans-Sartoux, FR
info@hsg-labs.com | +33 (0) 769 540 926

Specifications:

Operating temperature: 5 °C to 35 °C (non-condensing)

Storage temperature: 5 °C to 35 °C (non-condensing)

Input: DC 12V, 5.0A 

Power supply: AC 100 – 240V, 50/60Hz, 1.5A

Dimensions: L260 x H110 x W195 mm – 2.3kg

Calibration: Recommended once a year



Operating instructions:



Power On / Off

- To power on the unit connect the provided 12V 5A Power Supply then locate and press the power button on the back of the unit. The button will turn on.

- The unit can be powered off by unplugging the power source however is preferable to shut down the unit first by halting the product under Settings > System > Shutdown or pressing the power button.



Remote connection

To remote connect to the unit use a web browser typing the IP address.



Network information

Ethernet: **10.10.10.1/24**

WiFi: **N/A**



Default Password

SSH: **sysadmin / veeone**

SFTP: **sysadmin / veeone (port 22)**



Connection

To get started, open a web browser and type the IP address configured on the 4P.



Patterns

The files are available on the FTP server using the following connection settings:

FTP server: ftp.hsg-labs.com

FTP & explicit FTPS port: 21

Transfer type: Active

Username: pattern

Password: PattAccess