





Instruction card: **LIGHT MEASURE**

- 1 The suggested device placement location for light verification is from the center of the seating area or about 2 rows behind the handicap seating aisle.

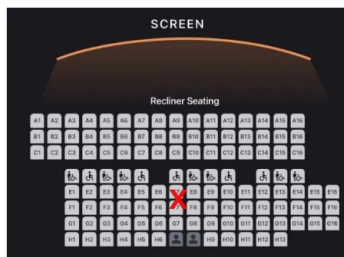

- 2 Place the Checker on the tripod at eye height to a patron sitting in a seat or hold the device still during the measurement test.
- 3 Ensure the projector is turned on and warmed up. Display a full screen white pattern in the desired projection format and projection settings (flat/scope/preshow). Set the house light to feature level.
- 4 Ensure the device is pointing in the center of the screen using the laser pointer.

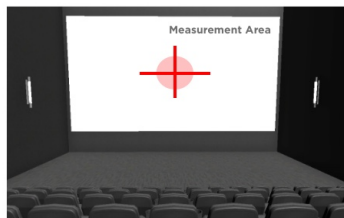

- 5 Read the Checker display for the current luminance measurement, record luminance.